

General Settings

- 1** Press the HOME button.
- 2** Select [General Settings] and press the ENTER button.
- 3** Select each of the settings as follows:

■ Language Setting

Select the language to be displayed with ▲/▼.

Language Setting	English*, Deutsch, Español, Français, Italiano, Português, Русский, Nederlands
------------------	--

* Factory default setting

■ Music Setting

Select the playing mode with ▲/▼.

Normal*	Plays music without repeating.
Repeat	Plays music repeatedly.
Repeat 1 Song	The current song is played repeatedly.

* Factory default setting

■ Video Setting

Change the playing back mode with ▲/▼.

Display mode***	Full screen mode	Displays an image enlarged to full screen size.**
	Fit to screen*	Zooms in on the center of the image, sufficient to fill the entire screen.**
Demo mode	ON*	Activates the demo mode.
	OFF	Deactivates the demo mode.

* Factory default setting

** The original image data will not change.

*** Display mode is not available while playing iPod/iPhone Video.

■ Photo Setting

Select the display mode for photo with ▲/▼/◀/▶.

Display mode	Full screen mode	The entire photo is displayed.
	Fit to screen*	The photo size fits in the unit screen.
Slide show	ON*	Plays the slideshow.
	OFF	Cancels the slideshow.
Slide show interval	10sec.*/1min./1hour/12hours/24hours	
Pre-Installed Photos	ON*	When [Background Photos] or [Fun Wake-up] is activated, pre-installed photos are displayed.
	OFF	Pre-installed photos are not displayed.**

* Factory default setting

** If all photo files imported to this unit are deleted, this setting is automatically set to [ON].

■ Radio Setting

Select the radio setting with ▲/▼.

AM channel step

10kHz	For the USA and Canada
9kHz	For Europe, Australia and New Zealand

FM Mono/Auto

Mono	Forces the radio to play in monaural.
Auto*	Switches from stereo to monaural automatically, in response to the FM signal.

* Factory default setting

■ Reset all settings

Resets the current settings to the default settings.